

Quick Start Guide Chip2Go



Step 1

Insert power cable at the rear of the machine and secure.
The Chip2Go will boot automatically.



Step 2

A Pull back the black quick release latch and push the arm up. Put roll on the arm. The Chip2Go recognizes automatically whether it has to program single or duo transponders based on the transponders being used.



B Push down the brake and thread liner through machine as shown.



C Pull the liner through until the first transponder is just visible but not covering the programming antenna.



Stop here.
Transponder must not cover the programming antenna.


D Push "Feed" and put liner through the upper slit as shown on the picture, until the liner is grabbed and a transponder is positioned on the programming antenna.



Step 3

Program transponder using one of these modes:

1. Count Down/Count Up
2. USB list file (see Knowledge Base)
3. External Barcode Scanner
4. External Keypad
5. Touchscreen Keypad

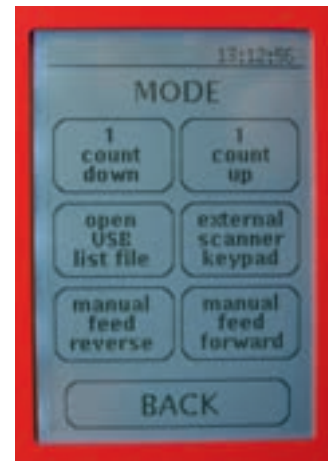


1. Count Up/Down:

- Enter number with the on-screen keypad and press "Switch Mode".
- Press "Count Up" or "Count down"



To stop the count-up or count-down, press "STOP" before removing the final transponder.

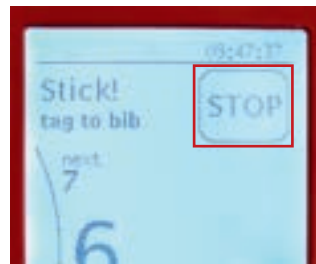

3. Barcode Scanner

- Press "Switch Mode".
- Choose "External Scanner Keypad"
- Hold the barcode on the bib under the scanner.

4. External Keypad

- Press "Switch Mode".
- Choose "External Scanner Keypad"
- Choose number on the keypad and press "Enter".



To return to the main menu press the "Keypad Button", this will only appear once the programmed transponder has been removed.



5. Touchscreen Keypad

- Choose number on the on-screen keypad and press \triangleright .



1.-5.

Peel off the programmed transponder:



If you are using a duo roll, a second transponder will be programmed and dispensed automatically.

Step 4

You can check transponder by holding them in front of the Transponder checking antenna.

The number of the transponder will appear here at the bottom.




Step 5

When done, tear-off excess liner, press "Switch Mode" and then "Manual Feed Reverse" to release the liner. Take off the power cable.



Cut the liner here!
Don't cut it in front of the first transponder because you need the empty liner next time to setup the Chip2Go.

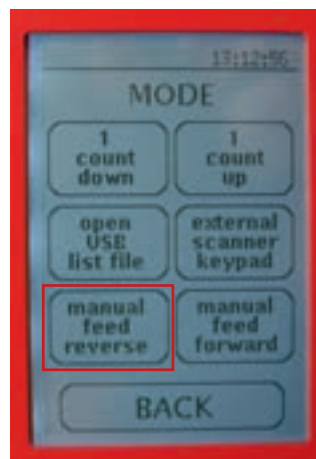

Cleaning instructions can be found in our Knowledge Base.



Headquarters Germany

race result AG

Joseph-von-Fraunhofer-Straße 11
76327 Pfinztal

Phone +49 (721) 961 409 01
info@raceresult.com
www.raceresult.com